

Installation Instructions

The 9point8 Digit Remote can be mounted inboard of your brake mount or outboard of your brake mount. Optional components are required to mount it on the brake mount with Shimano I-Spec and SRAM MatchMaker compatibility.

1. Mount your Digit Remote under the left-hand grip using the mounting screw supplied. Torque as indicated.

Feed the Cable Housing through your bike frame and seat tube. Follow the frame manufacturers recommendations.

Determine the path of your cable all the way from the remote actuator to the seat tube. DO NOT LOCK the cable onto the frame too tightly; the Cable Housing must be able to slide for installation and removal. Use the supplied Ferrule at the Remote end of the housing, and fit the housing into the remote.

Turn the handle bars to achieve the shortest route from the Remote to the Cable Housing sticking out of your seat tube. For first fitment, cut the housing to leave about 150mm (6 in) of Housing above the top of the seat tube. In most cases 50-75mm (2-3 in) is the optimum length; the excess can be removed later. This leaves enough cable slack to easily access the Quick Connector to install/remove your post. DO NOT STRIP the plastic coating off of the Housing.




Always cut the cable housing using a quality cable cutter tool. After trimming the cable housing return the ends to round and open up the ends of the liner to allow the cable to pass through.

2. Slide the Cable Seal Nut onto the Cable Housing, as shown
3. Push the end of the Cable Housing up into the assembly as shown. Thread the Cable Housing tightly onto the Housing Clamp T-Nut by holding the Cable Housing with pliers and turning the T-Nut by hand. Ensure the Housing has threaded all the way into the T-Nut and has bottomed out.

Remove the two set screws; they are not needed for the Digit installation.


continued on back

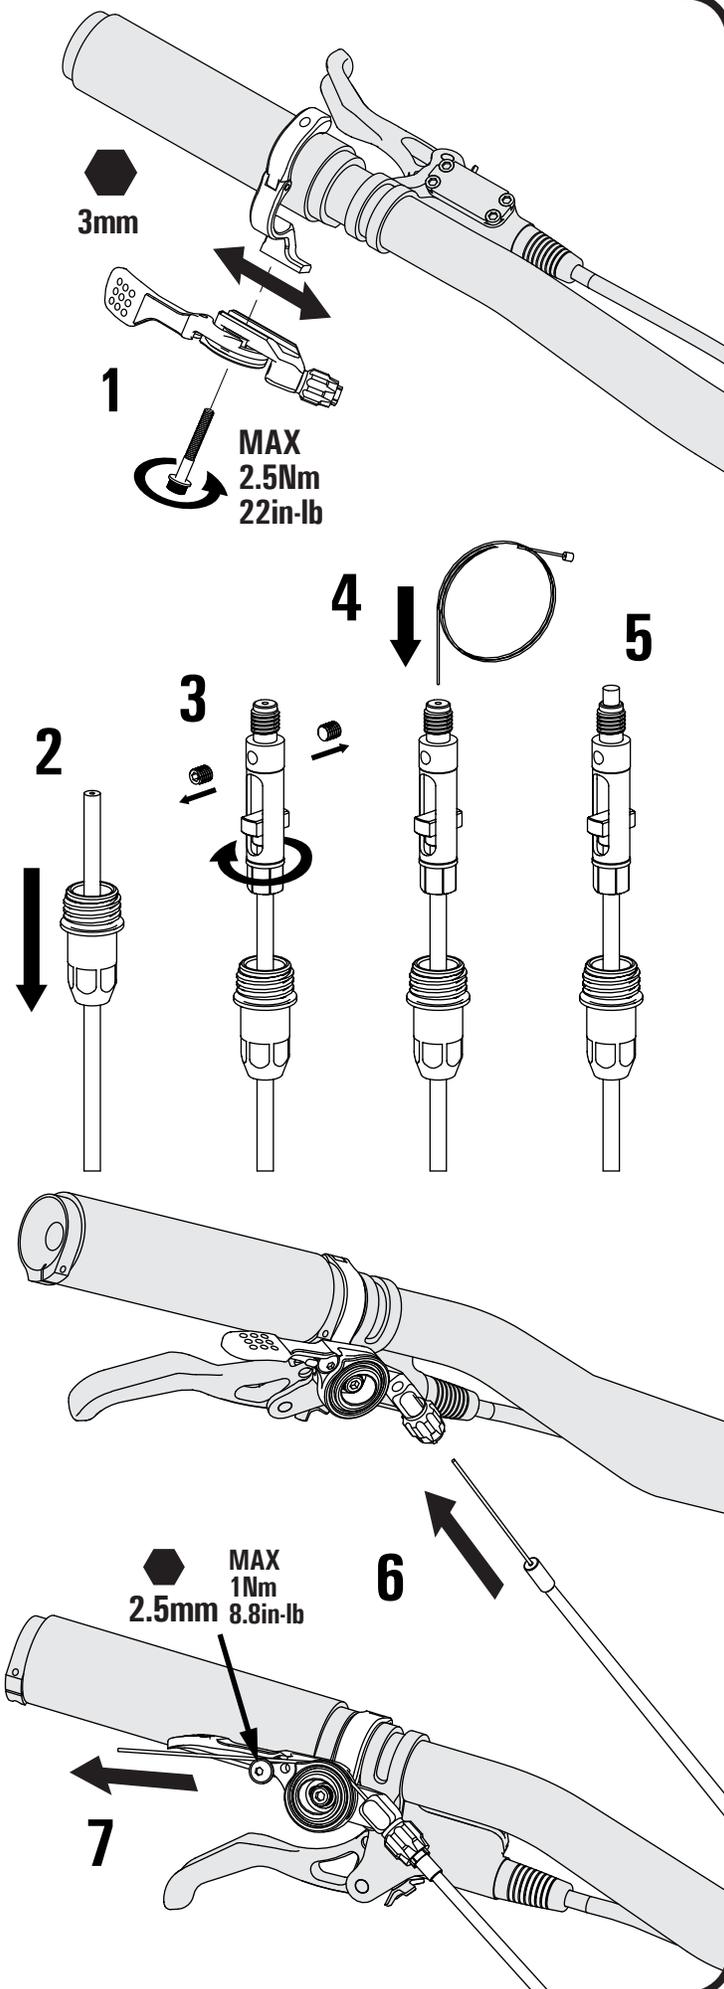

Parts List

ITEM	QTY	PART NO.	DESCRIPTION
1	1		DIGIT THUMB LEVER
2	1		DIGIT THUMB LEVER PERCH
3	1	0000-0840	DIGIT AXLE
4	1	0000-0849	CABLE CLAMP SCREW
5	1		DIGIT MOUNTING SCREW

Digit Remote

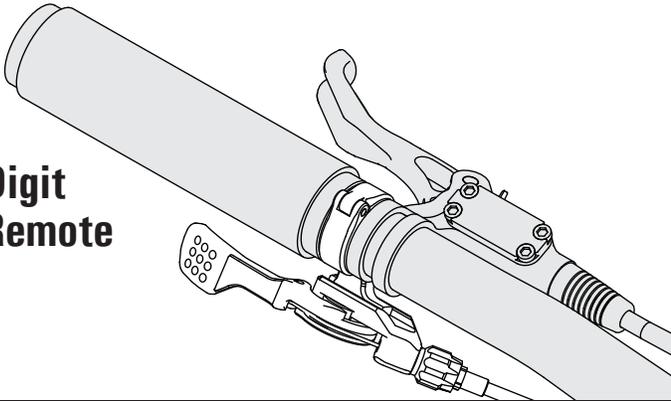

Installation Instructions

4. Feed the Wire Cable starting at the Quick Connector, through the Housing, and out to the Remote.
5. The Cable Button will pull up flush to the top of the Quick Connector.
6. Feed the Cable through the Remote, and push the Housing with Ferrule into the Remote Barrel Adjuster firmly.



Ensure that the housing is fully seated at both ends and the wire cable is very tight before clamping the cable with the Cable Clamp Screw.

7. Set the Barrel Adjuster about 1 turn out from fully-bottomed. Pull the cable very tightly, and clamp it down with the Cable Clamp Screw.
8. Perform a Brake Reset using one of the three approved techniques


To see brake reset options view this video:

<https://youtu.be/VYtu6FDD7dg>

9. Adjust the Barrel Adjuster until there is just a little free-play in the remote. If there is not enough stroke in the Barrel Adjuster, repeat from Step 7.



The Fall Line™ seatpost requires a small amount of cable play in the Remote to operate properly. If there is no play, the cable must be loosened until there is.

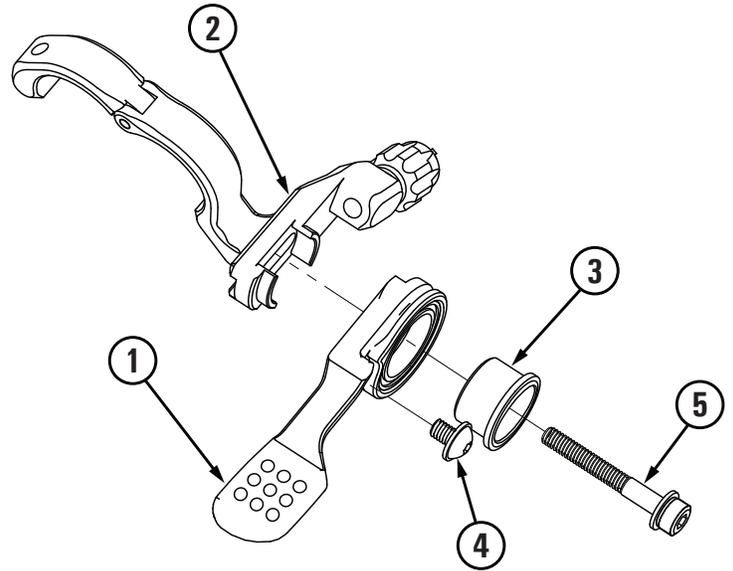

The 9point8 Digit requires periodic maintenance to ensure quality functional capabilities. Your Digit should be disassembled and cleaned with soap and water when required. Allow parts to dry before re-installing on your bike. Avoid washing the ball bearing.